


### **Removal**

---

- 1 Disconnect regulating linkage (5).
- 2 Push off locking eye (arrow), push longitudinal regulating shaft to the rear and remove.

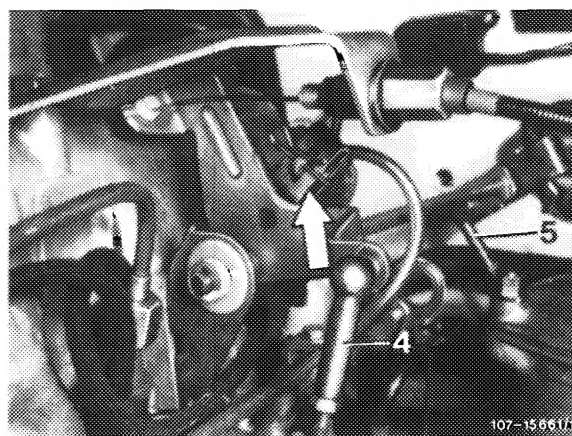

### **Installation**

---

- 3 For installation proceed vice versa. Grease bearing points as well as ball sockets of regulation with Molykote-Longterm 2.
- 4 Adjust regulating linkage (30—300).